

LED Dance Floor Panel Set Up Instructions

Automatic Mode

The panels must be set up end to end in direction of arrows on side of panels.

Power needs to run into the power edge ramp at end of the row

Each power input will run a max of 10 panels

The panels will run in an auto/audio random mode when powered up.

Program Mode

Each panel should be addressed via the led address panel on each floor

Mode - 3ch

Address - (xxx dmx starting channel)

Slave Mode